

VxLEARN Networks

Networking & Cybersecurity Track
Simulated Employment Program

Lab Report: Create User Accounts

Prepared by:
Kudzaishe Majeza
Junior Network Engineer – VxLEARN Networks

Mentor:
Titus Majeza
Senior Network Engineer

Date: 20 February 2026

Table of Contents

Introduction	3
Objectives	3
Required Resources	3
Part 1: Creating a New Local User Account	3
Step 1: Open the User Account Tool	3
Step 2: Create a User Account	4
Part 2: Reviewing User Account Properties	9
Part 3: Modifying Local User Accounts	10
Step 1: Change the Account Type	10
Step 2: Delete the Account	11
Reflection Questions	12
Conclusion	12

Introduction

In this lab, I created and modified user accounts in Windows. The purpose of this lab was to understand how local user accounts are created, managed, assigned permissions, and deleted within the Windows operating system.

Objectives

- Create a new local user account
- Review user account properties and group membership
- Modify account type and permissions
- Delete a user account


Required Resources

- A Windows PC with Administrator access


Part 1: Creating a New Local User Account

Step 1: Open the User Account Tool


1. Logged into Windows using an Administrator account (CyberOpsUser).
2. Clicked Start and searched for Control Panel.

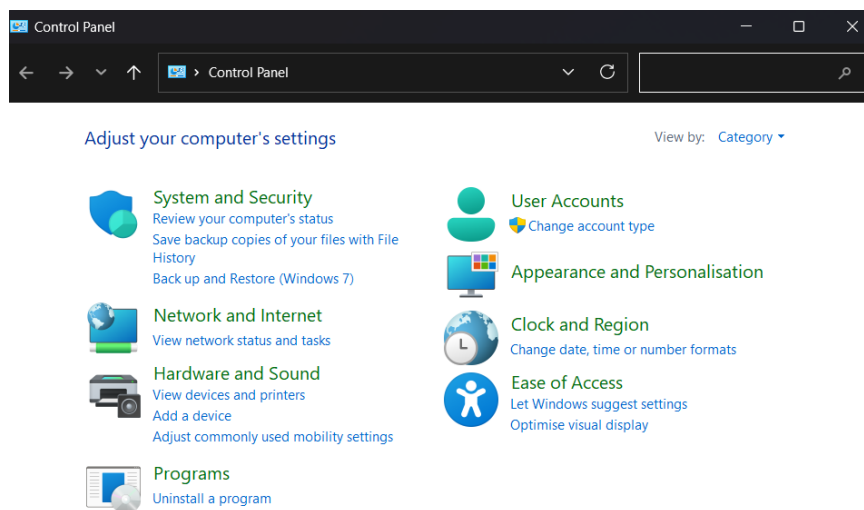

3. Changed View by to Small icons.

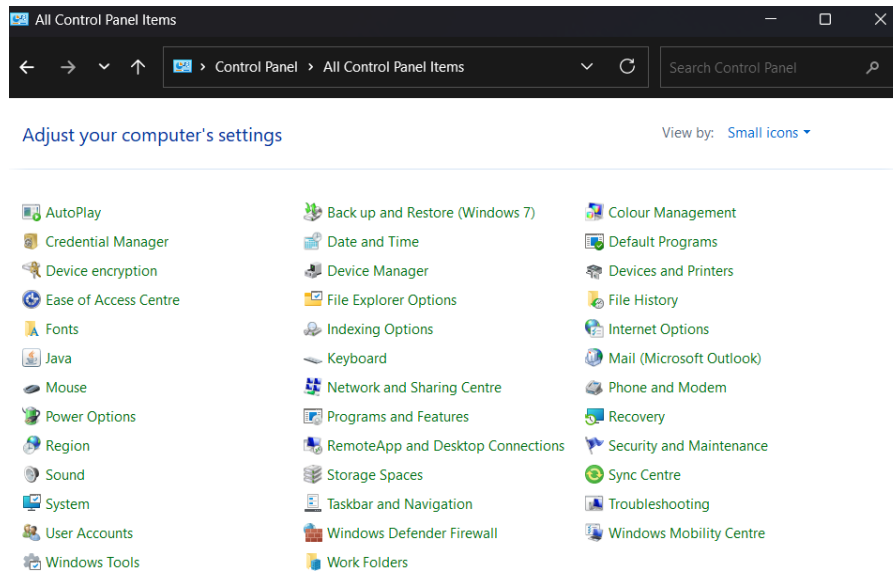

4. Selected User Accounts.

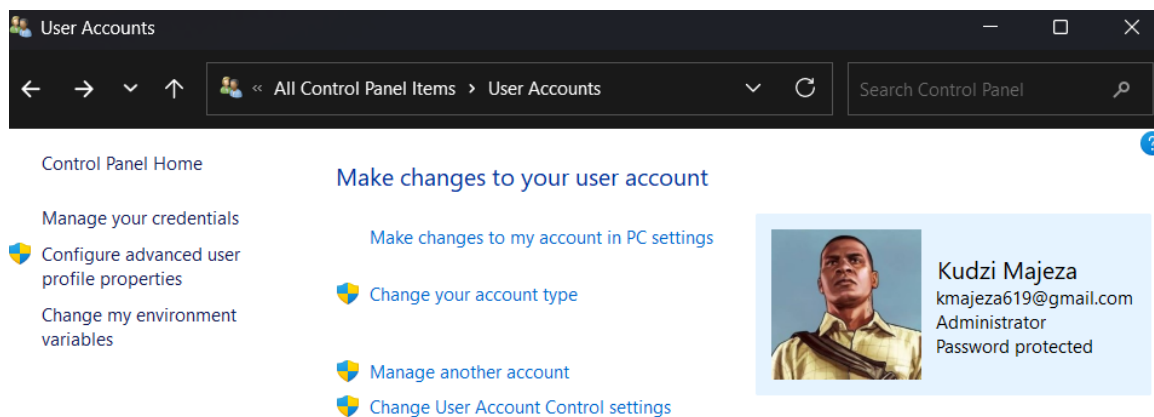

Step 2: Create a User Account

1. Clicked Manage another account.
2. Clicked Add a new user in PC settings.
3. Selected Add someone else to this PC.

4. Selected I don't have this person's sign-in information.
5. Selected Add a user without a Microsoft account.
6. Created a local account named User1 and clicked Next.

Create a user for this PC


If this account is for a child or teenager, consider selecting **Back** and creating a Microsoft account. When younger family members log in with a Microsoft account, they'll have privacy protections focused on their age.

If you want to use a password, choose something that will be easy for you to remember but hard for others to guess.

Who's going to use this PC?

Make it secure.

[Next](#)[Back](#)

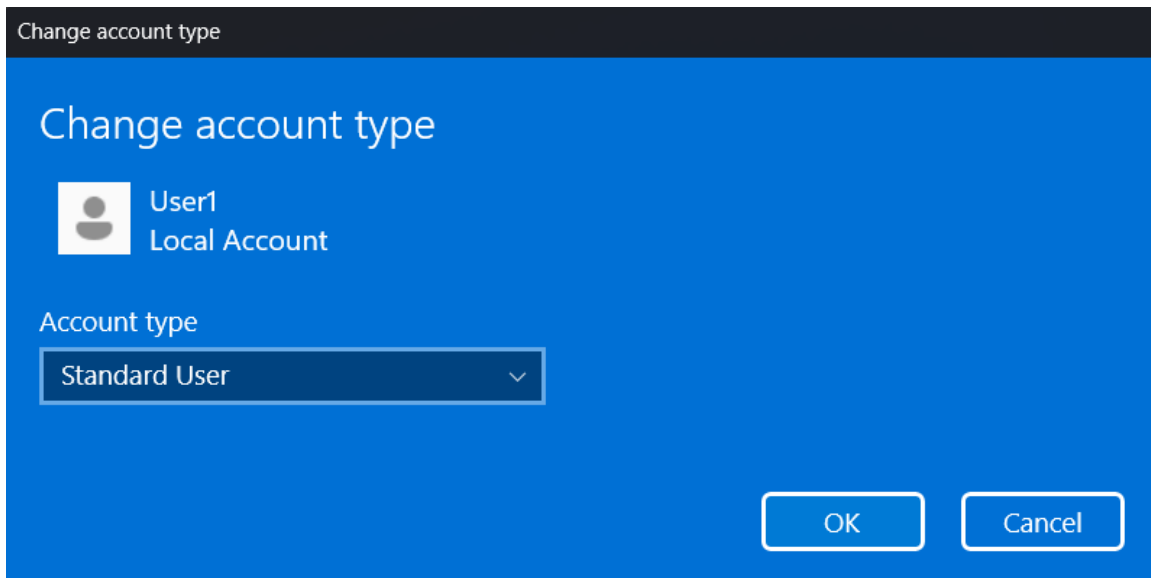



Question: What type of user account did you just create?

Answer: A Local Standard User account was created. It is not linked to a Microsoft account and has limited system privileges by default.

7. Logged into the newly created User1 account successfully.

8. Navigated to C:\Users, right-clicked the User1 folder, selected Properties, then Security tab.

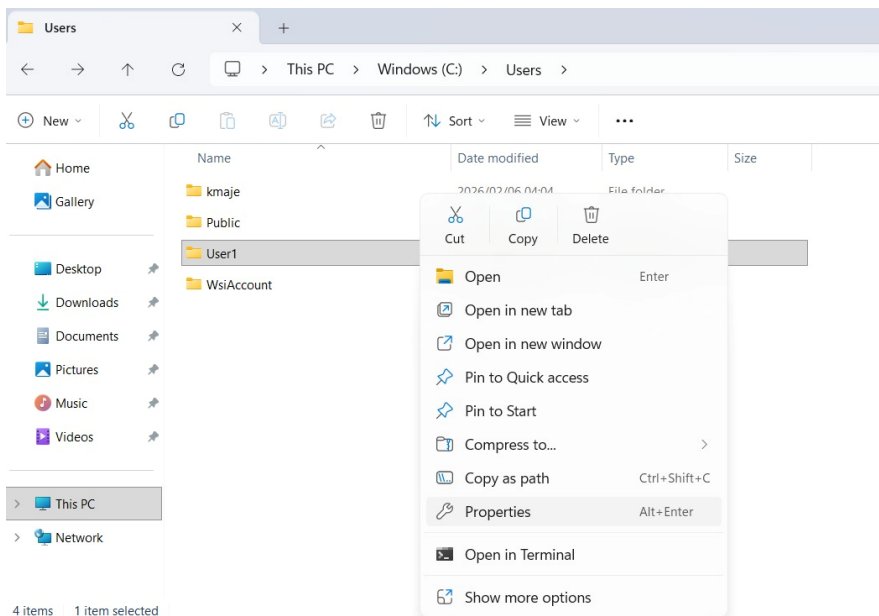

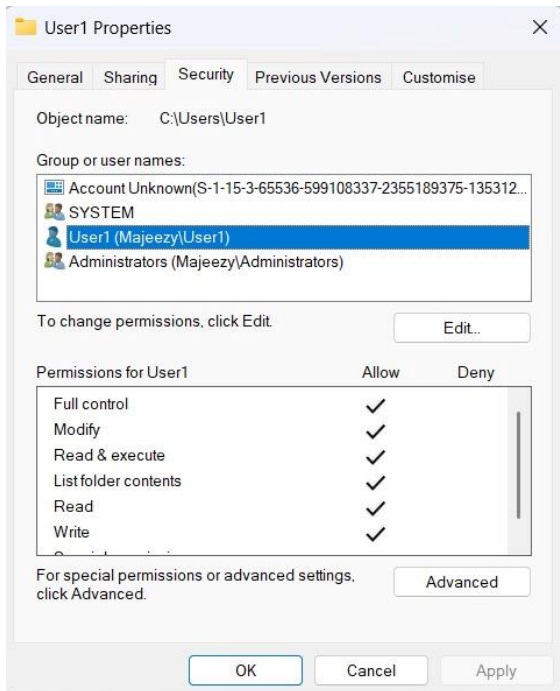

Question: Which groups or users have full control of this folder?

Answer: The User1 account and the Administrators group have Full Control permissions over this folder.



9. Attempted to open the CyberOpsUser folder.

Question: Were you able to access the folder? Explain.

Answer: No, access was denied. Standard users do not have permission to access another user's personal folder due to security restrictions.

10. Logged out of User1 and logged back in as CyberOpsUser.

11. Navigated to C:\Users and reviewed folder permissions.

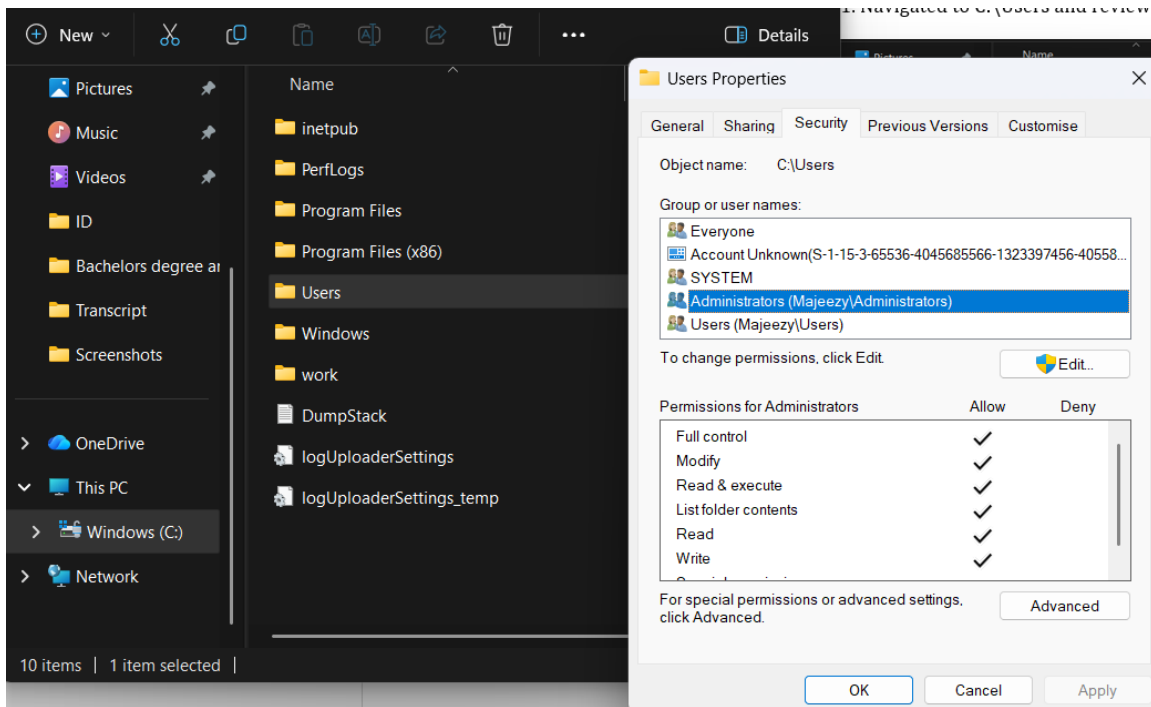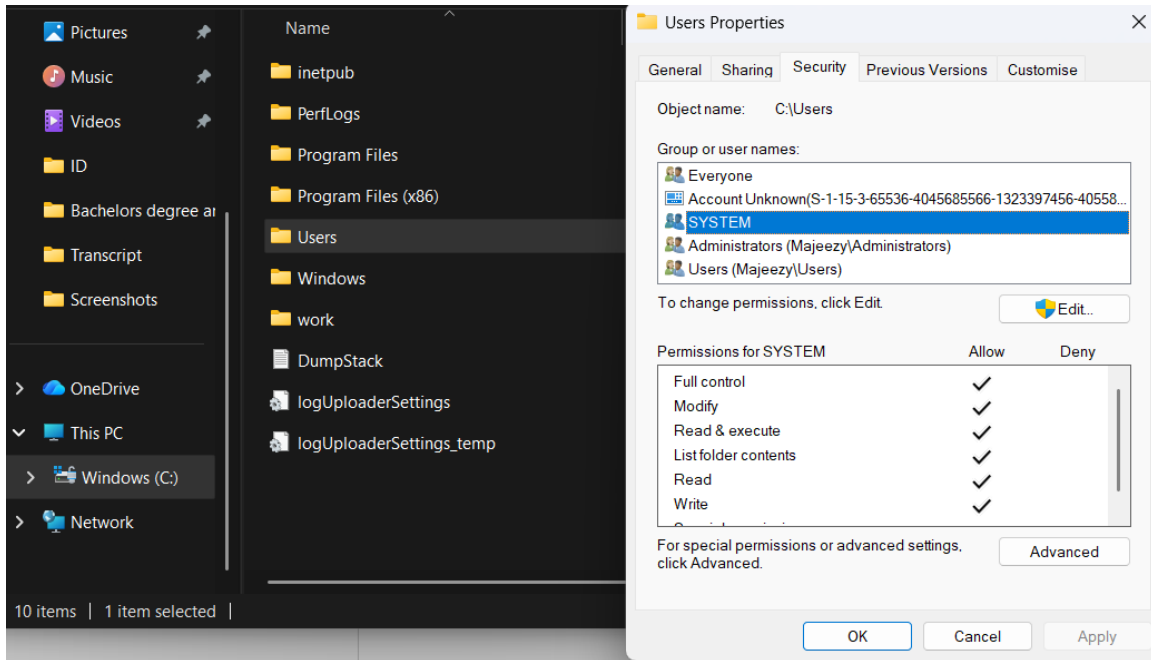


Question: Which groups or users have full control of this folder?

Answer: The Administrators group and the SYSTEM account have Full Control permissions.

Part 2: Reviewing User Account Properties


1. Opened Control Panel > Administrative Tools > Computer Management.

2. Navigated to Local Users and Groups > Users.

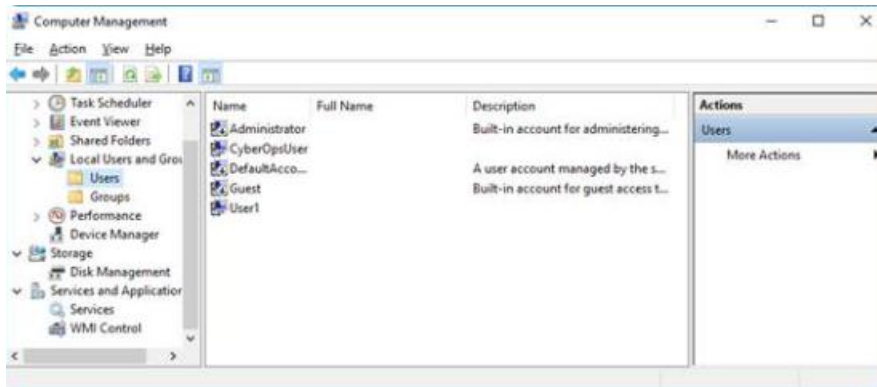

3. Right-clicked User1 and selected Properties.

4. Selected the Member Of tab.

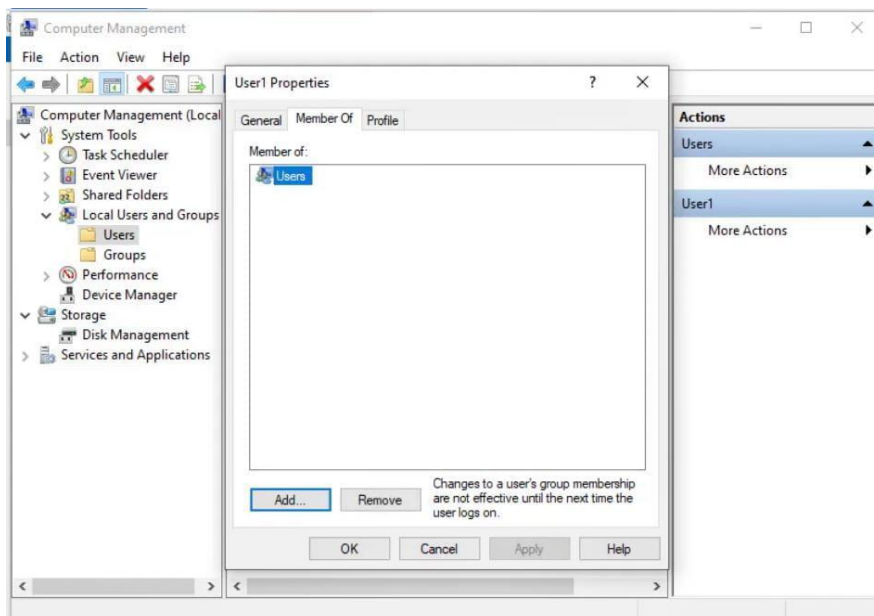

Question: Which group is User1 a member of?

Answer: User1 is a member of the Users group by default.

5. Right-clicked CyberOpsUser and selected Properties.

Question: Which group is this user a member of?


Answer: CyberOpsUser is a member of the Administrators group.

Part 3: Modifying Local User Accounts


Step 1: Change the Account Type

1. Opened Control Panel > User Accounts > Manage another account.


2. Selected User1.

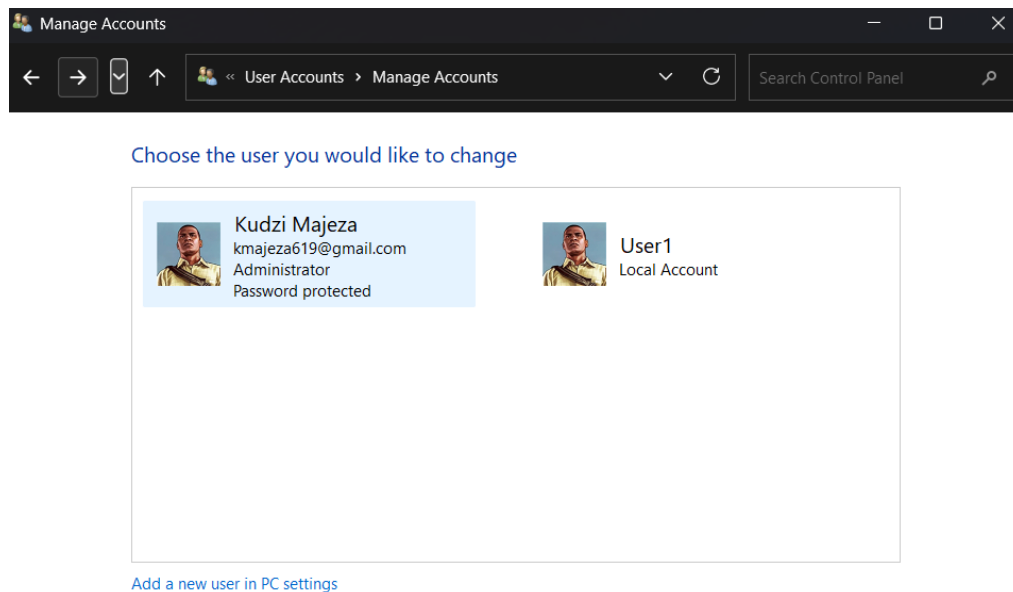

3. Clicked Change the account type.

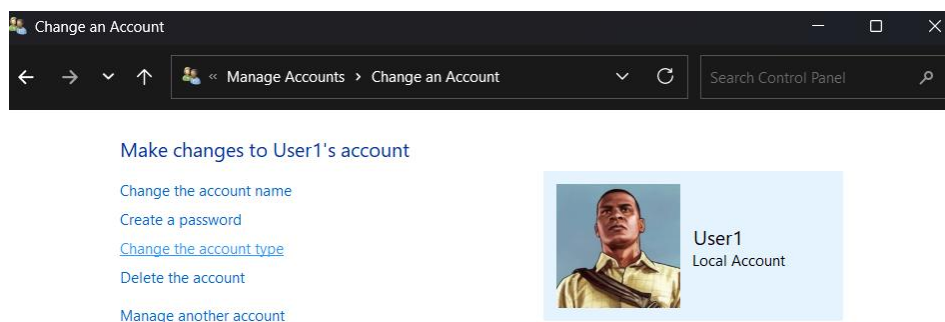


4. Selected Administrator and clicked Change Account Type.

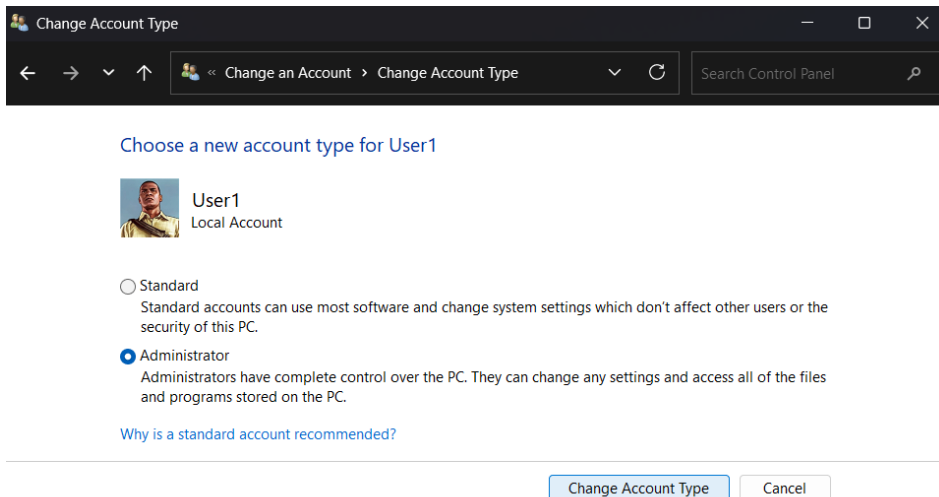

5. Opened Computer Management > Local Users and Groups > Users.

6. Checked Member Of tab for User1.

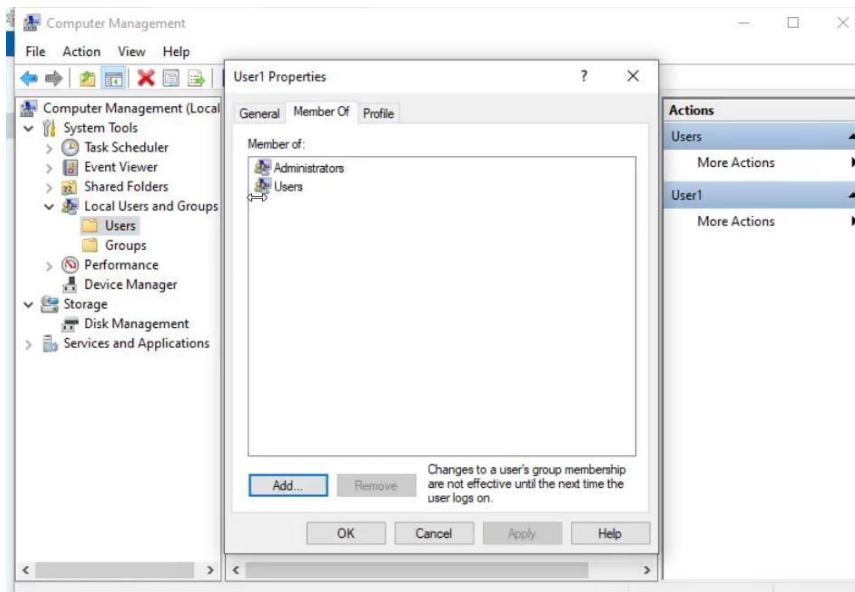

Question: Which groups does User1 belong to?


Answer: User1 now belongs to both the Users group and the Administrators group.

7. Removed User1 from the Administrators group.

Step 2: Delete the Account

1. Right-clicked User1 and selected Delete.

2. Clicked OK to confirm deletion.

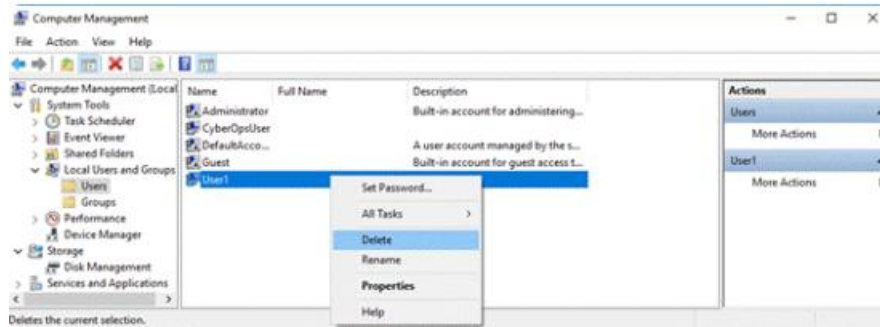

Question: What is another way to delete a user account?

Answer: Another way to delete a user account is through Control Panel > User Accounts > Manage another account, then selecting the account and choosing Delete the account.

Reflection Questions

1. Why is it important to protect all accounts with strong passwords?

Strong passwords protect user accounts from unauthorized access, data theft, malware attacks, and privilege escalation. Weak passwords increase the risk of system compromise.

2. Why would you create a user with Standard privileges?

Standard privileges limit system changes and reduce security risks. This helps protect the system from accidental damage or malicious activity.

Conclusion

This lab demonstrated how to create, manage, modify, and delete local user accounts in Windows. It reinforced the importance of user permissions, group memberships, and security best practices.